

Installation Instructions
KS652 Ball-Lock Tool

Warning: Always wear safety glasses when operating hand tool.

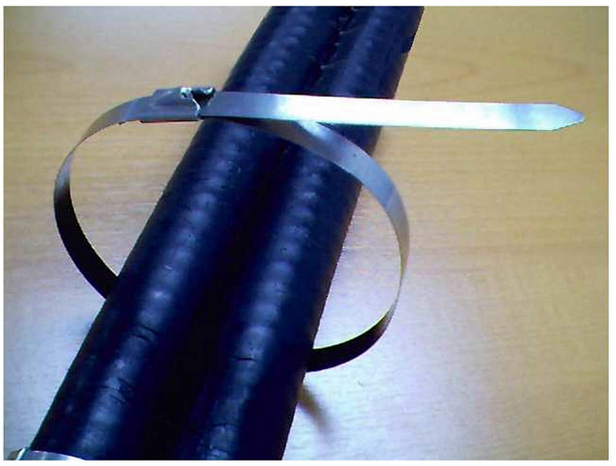


1. Wrap Cable around objects and tighten clamp by hand.

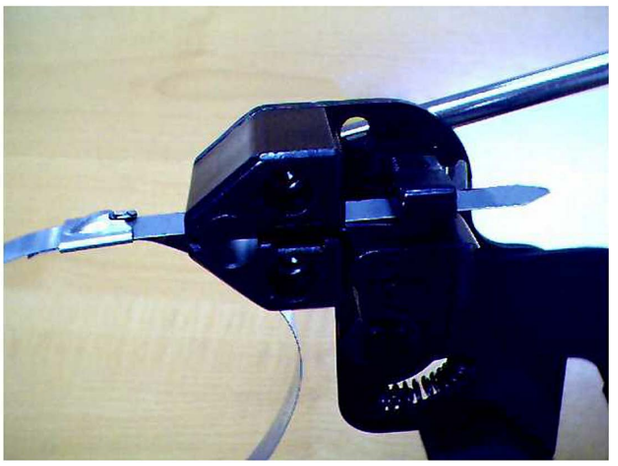

2. Slot tail of Cable tie into the slot of the tool, push nose of tool against the buckle.



3. Squeeze tool repeatedly untill desired tension on the Cable Tie is reached.

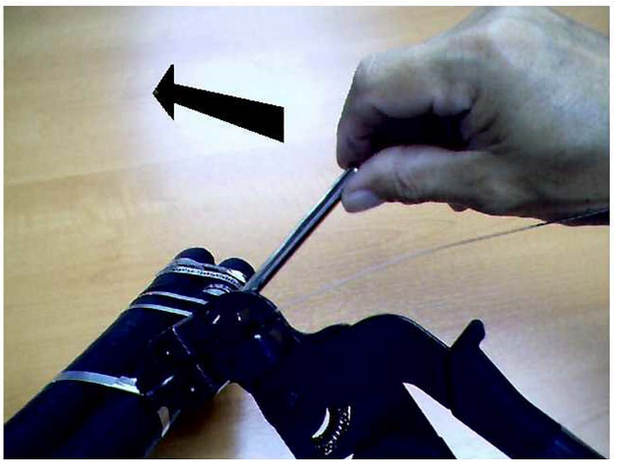

4. Turn cutter lever forward as shown to cut off excess tail end.



5. Finished Cable Tie assembly.

UES Promura - Product enquiries

+61 3 9547 5833 | sales@uespromura.com.au | uespromura.com.au

10-12 McWilliam Street, Springvale VIC 3171, Australia