BAND-IT

Installation Instructions
KS652 Ball-Lok Tool

Warning: Always wear safety glasses when operating hand tool.




1. Wrap Ball-Lok Tie around objects and tighten clamp by hand.



2. Slot tail of Ball-Lok Tie into the slot of the tool, push nose of tool against the buckle.



3. Squeeze tool repeatedly untill desired tension on the Ball-Lok Tie is reached.

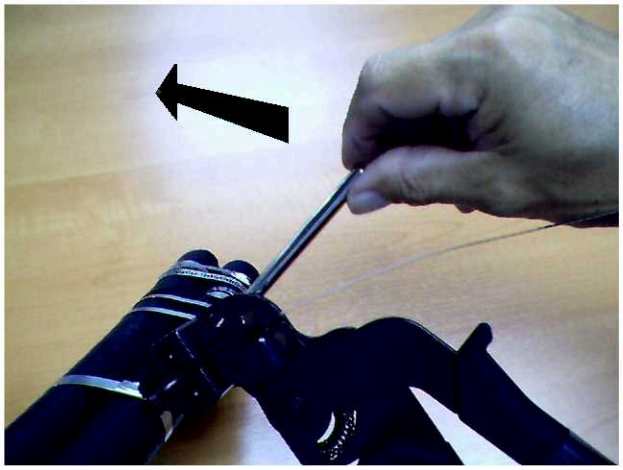

4. Turn cutter lever forward as shown to cut off excess tail end.



5. Finished Ball-Lok Tie assembly.

BAND-IT ®

UES Promura
Australian sales & support
10-12 McWilliam Street
Springvale VIC 3171
Australia
+61 3 9547 5833
sales@uespromura.com.au
www.uespromura.com.au

IDEX CORPORATION

Copyright BAND-IT - IDEX, Inc.
a Unit of IDEX Corporation
2001 All rights reserved