


## Installation Instructions KS652 Ball-Lock Tool

**Warning:** Always wear safety glasses when operating hand tool.




1. Wrap Cable around objects and tighten clamp by hand.

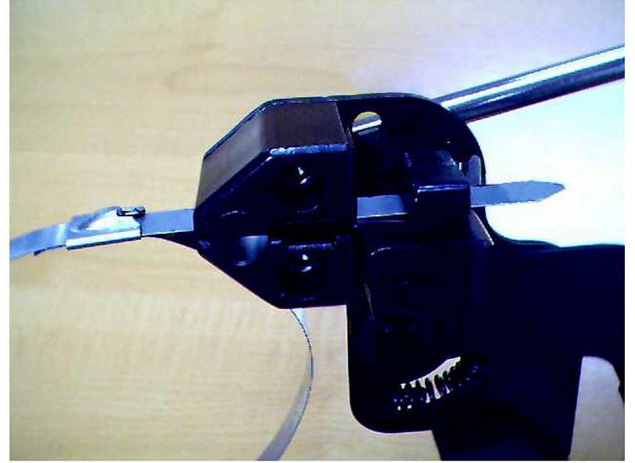

2. Slot tail of Cable tie into the slot of the tool, push nose of tool against the buckle.



3. Squeeze tool repeatedly until desired tension on the Cable Tie is reached.

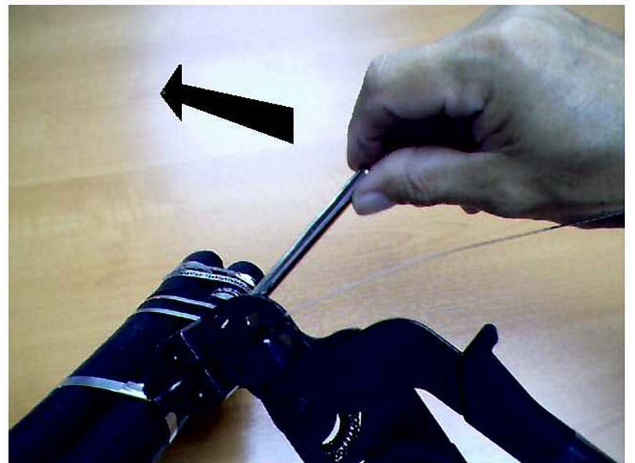

4. Turn cutter lever forward as shown to cut off excess tail end.



5. Finished Cable Tie assembly.